Garlic Bread





02:00

This recipe is available for:

- eikon® e4
- eikon® e2s SP (1000W)
- eikon® e2s HP (2000W)
- eikon® e3
- eikon® e4s
- eikon® e1s
- eikon® e5

Accessories:

e3 Flat Turn-table Plate 40H0347 e3 Non-stick Cooking Liner 40H0190

R O F I L



275 °C





1 Slice



From Scratch

Stage 1

02:00



. 0 %

Ingredients

1-4 slice

Garlic Bread

1. Food Preparation
Place them on the liner.

Cooking InstructionCook as per oven profile.

3. Food Serving Instruction

Remove the cooked food from the liner and serve.