Ham&Cheese Croissant





00:20

This recipe is available for:

• eikon® e1s

Accessories:

e1s/e2s Full Size Cooking Tray 32Z4080 (Black), 32Z4100 (Red), 32Z4093 (Green), 32Z4101 (Blue)



260 °C



Chilled 4°C





1 Piece

Partially Cooked

00:20 ₩ 50 %

Stage 1

. 100 %

Ingredients

1	pcs	Croissant
2	slice	Ham cooke
2	slice	Cheese

1. Food Preparation

Cut the Croissant half way through and fill it with the ham and cheese. Place it on the tray.

2. Cooking Instruction Cook as per oven profile.

3. Food Serving Instruction Remove the cooked food from the tray and serve.